

TELEMETRY & DATA LOGGING

UNITEL™ 1

An all alarms fault dial out system which reads all alarm signals and alerts any fault by automatically dialling to specified telephone numbers or sending a text message.

To identify the problem a person will need to go to site and investigate the flare control system.

The system is suitable for standard phone line or GSM connection.

UNITEL™ 2


As for Unitel 1 plus the facility to access the flare and monitor its operation, start and stop the flare and diagnose faults remotely.

Digital input & output signals can be read to monitor flare status including flow, temperature and operating status.

The system is suitable only for standard phone line.

UNITEL™ 2A

As for Unitel 2 but has the facility to read all analogue inputs such as analysers.

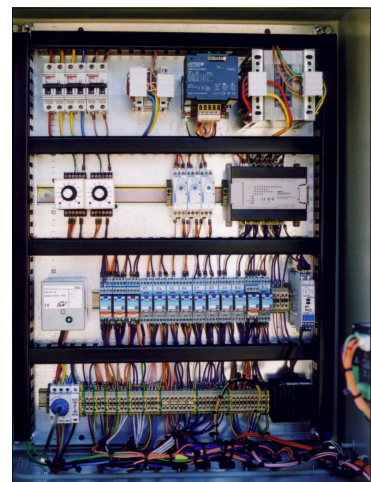

UNILOG™ OS

All data from control systems and analysers can be viewed and down loaded either into a disc within the Unilog OS panel or via a laptop computer.

UNILOG™ RA

As for the Unilog OS but has the facility to remotely access and download all data and to access all digital and analogue signals.

The system is suitable only for standard phone line.



Specifications may be changed without prior notice

Uniflare Limited, Unit 19 Runway Farm Technical Park, Honiley Road, Kenilworth CV8 1NQ, Warwickshire, England
Tel : +44 1676 529118 Fax : +44 01676 529119
Email : enquiries@uniflare.co.uk
Web : www.uniflare.co.uk

